

TREK^oLOGY

SPORTS & OUTDOORS

Scan the QR code directly on your mobile phone
for Setup Video Guide

<https://trekology.com/pages/video-guide>



 www.trekology.com

 support@trekology.com

 www.facebook.com/trekology

**DESIGNED IN
PORTLAND OREGON**


  Made In China

Legal Disclaimer

There are some inherent risks involved in using any product purchased from this listing including but not limited to serious physical injury. Intended for experienced adults over 18 years of age. We will not be held liable under any circumstance for incidental or consequential loss, damage, or injury due directly or indirectly to the use of this product including any malfunction from negligence or defect. The seller makes no claims as to the suitability of this product for any specific purpose or use. Buyer understands that the use of the product can cause possible injury or death to themselves or others. The Buyer holds our company, its agents, & affiliates harmless from any liability arising out of or relating to the use or ownership of this product. Buyer fully accepts responsibility & releases the seller for any and all personal injuries, fatal injuries, and other damages incurred as a result of the Buyer or anyone else's operation of this item.

TREK^oLOGY

SPORTS & OUTDOORS

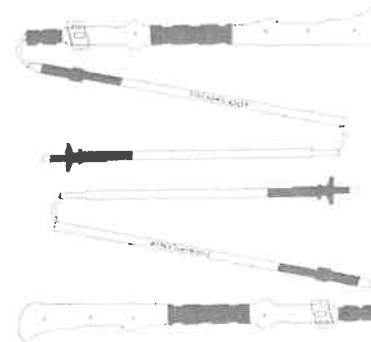

TREK-Z-HIKING POLES

INSTRUCTION MANUAL

BEDIENUNGSANLEITUNG

MODE D'EMPLOI

MANUALE DI ISTRUZIONI

MANUAL DE INSTRUCCIONES

INSTRUKCJA OBSŁUGI

GEBRUIKSAANWIJZING

INSTRUKTIONSMANUAL


HOW TO ASSEMBLE YOUR TREK-Z HIKING POLES

STEP 1:

Holding Handle with one hand, allow Pole to hang freely.

Section 2 will collapse into Section 1.


This should happen automatically.

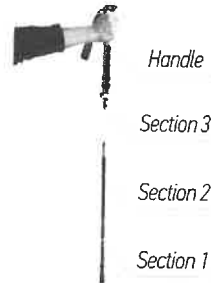

STEP 2:

Locate 2nd Ring below the Fliplock on Handle.

Pull down exposing hidden Inner Shaft.

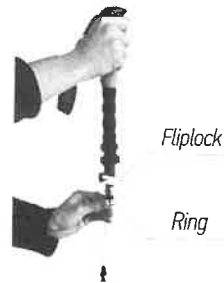

English | 1


TREK[®]LOGY

STEP 3:

Keep pulling the hidden shaft all the way down. Tension may begin to build within shaft.

Continue to Pull until silver Locking Pin pops out. Listen for the CLICK. (A hard yank may be needed to pull out the PIN.)


Pole is locked when the Pin has come all the way out and you have heard the distinct CLICK. The Pole is now Locked and Ready for use.

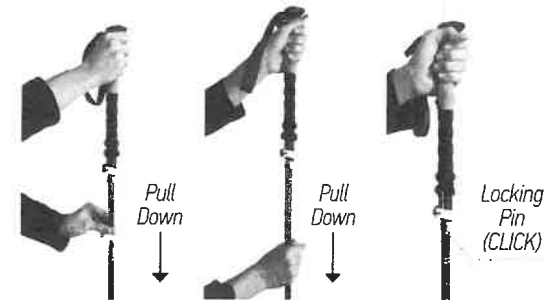

English | 2

HEIGHT ADJUSTMENT

Once Pole is Locked, adjust to desired height by releasing the Fliplock on the upper handle.

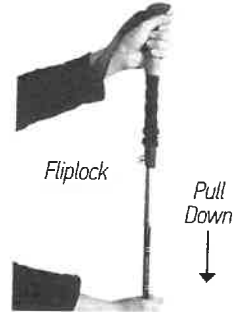

Adjust to desired height.
To Avoid Injury - NEVER extend beyond white Stopline.



TREK^{OL}OGY

Re-latch Fliplock to secure.



If necessary, turn the thumbscrew clockwise to tighten the pole.



For illustration purposes only. Actual pole design may be different.